

Instructions for Installing UpCycle Products Automatic Diverter


Thank you for purchasing an UpCycle Products Rain Water Diverter. Our diverters are made from UpCycled Vinyl fence post covers.



Your Diverter Kit will contain the following parts as shown at left. One diverter and one attachment hose. Tools required to install is a hacksaw, a tape measure, a pair of tin-snips or garden shears, and a marker.

1. Install rain barrel per the installation instructions provided with your rain barrel.

2. The rain barrel should be installed so the side closest to the downspout is less than 12 inches away from the side of downspout.

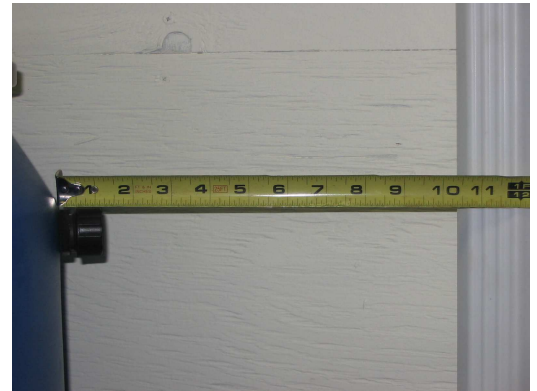

3. Measure across from overflow (top) fitting on rain barrel when it is at installed height and mark downspout at same level.

4. Measure up 1 inch from line on downspout and cut the downspout straight across. Separate downspout halves.



5. Cut a triangular piece about 1 inch tall from one side of the downspout.



6. Install diverter with the round tube going into the lower half of the downspout and then install upper half of downspout into the square opening on top.



7. Connect diverter to your rain barrel using the provided hose.

When it rains water will flow from the diverter, through the hose to your barrel and will also continue to flow through the diverter to the lower half of the downspout. When the barrel is full then all the water will proceed down the downspout.